

To ensure an easy install, please do not skip the first step:


- 1) Take the time to figure out where you are going to install the thermostat making sure you can connect the fan & thermostat along with having enough length to plug in the cord.



- 2) AFTER carefully deciding proper placement for thermostat on power cord, Position as shown above.



- 3) Using wire cutters, snip 1/2 of the way through the cord.

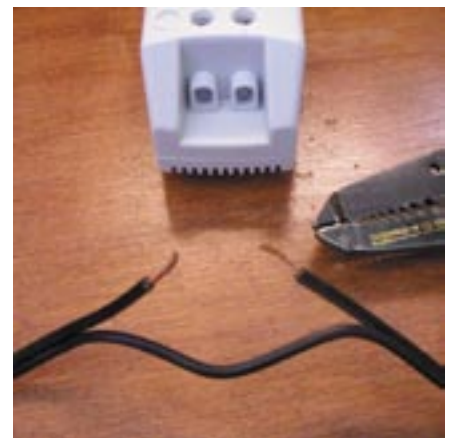

- 4) Carefully strip 1/4 inch of wire to expose bare copper. Twist copper in fingers to bond wires.



- 5) Fold cord in half as shown and insert copper wire into holes at the bottom of thermostat.



- 6) Using a fine screwdriver, carefully tighten screws to hold wire in place.



- 7) Completed thermostat shown with included mount.